


PREVENT[®] GROMMET SNAP CONNECTOR

MODEL

Model # GROMMETSNAPE



FEATURES

Extra large air intake applications utilize two or more PreVent[®] screens for full intake coverage. Black plastic snaps (fits standard 3/8" grommet) are available to combine or overlap the inside vinyl edge of our Model U or Model BHA filters for a smooth and secure installation.

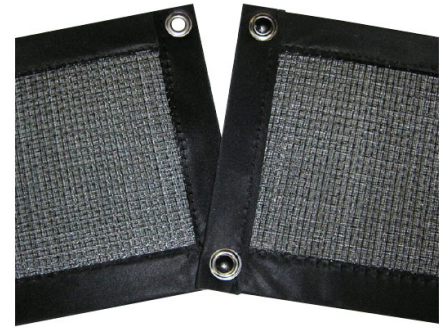

SNAP INSTALLATION INSTRUCTIONS

- Screens should be ordered with matching grommets on hook up sides.
- Line up the screen sides to match up grommets.
- Insert grommet snap through the top screen and press firmly into the bottom screen.
- Complete connection by inserting snaps on remaining inside vinyl edge grommets.

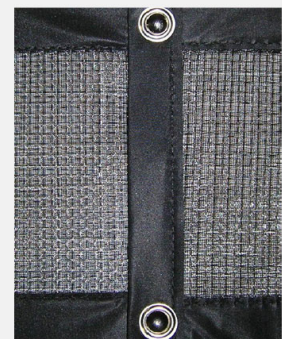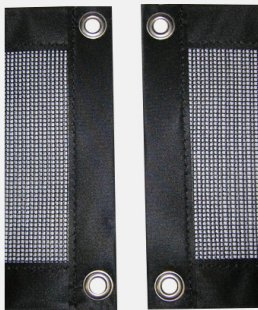

For questions and orders contact
Rensa Filtration at info@rensafiltration.com
or visit rensafiltration.com

Permatron
2020 Touhy Avenue, Elk Grove Village, IL 60007
1-800-882-8012 | www.permatron.com